


INSTRUCTIONS BOOKLET

for programming the calibration of the
VISION21 INTEGRATED SCALE
for **Semi-trailer and double train**

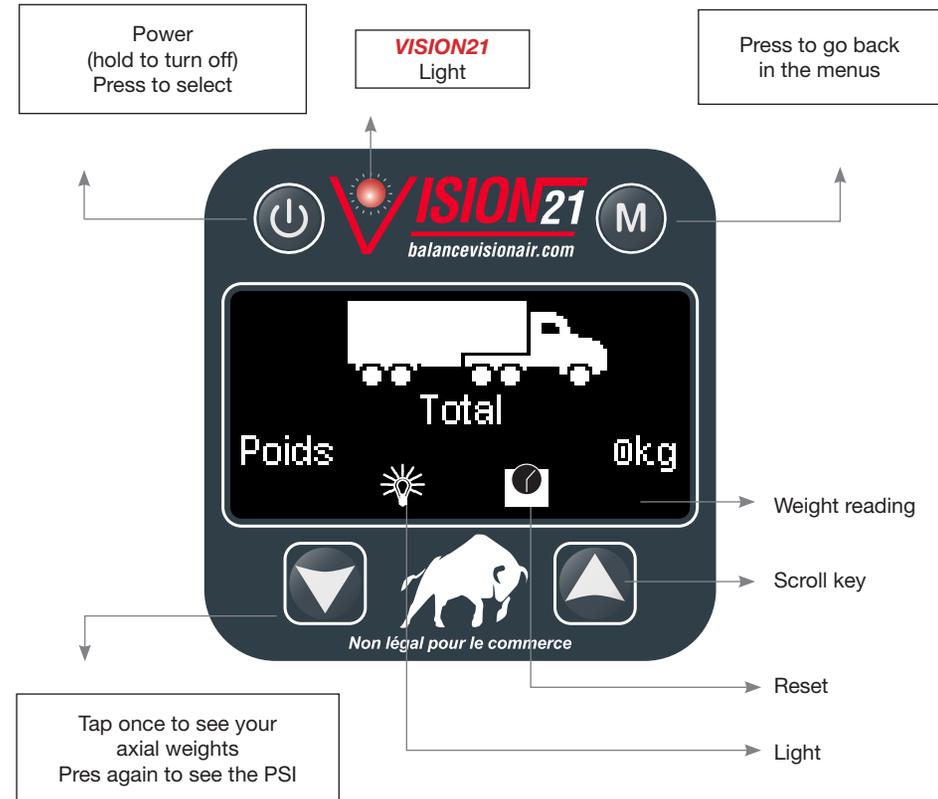

WELCOME

Return to your weight display screen.

LOADING

EXPECTED: This is the total weight (truck + load) that you do not want to exceed.

CURRENT: It's your weight

SYMBOLS:  return  light  reset  weight reading

ZEROING: To perform the zeroing, select the reset symbol  then press . To reset your zeroing and see your current weight. Select the reset symbol  then hold the button .

LIGHT: To activate the Vision 21 light select the light symbol  and press .

Note: The light is programmed to start flashing slowly at 75% of the “expected” weight, flash quickly at 90% of the “expected” weight and stay on when the weight is reached.

To go back select  then press .

CONFIGURATION

DEVICE NAME: Truck unit name or number.

TYPE OF VEHICLE: Category of truck ex. : semi-trailer, 10-12 wheels, etc.

TRAILER SELECTION: To select your trailer, press . For double train, the numbers 1 and 2 indicate the location of the trailer.

TRAILER MANAGEMENT: Add new trailer.

Select “new trailer” then press  to name your trailer with the arrows indicate the name or number of your trailer (maximum 8 characters) then press  and select the disquette  to save or  to go back.

LANGUAGE: French - English

UNIT: Metric (kilo) - Imperial (pound)

CONTRAST: Screen Brightness

ROUNDED: To see your weight to the nearest kilo ex. : (18123kg)
to the nearest 10 kilos e.g. : (18120 kg)
to the nearest 100 kilos e.g. : (18100 kg)

STANDBY: How long the screen will stay on before turning off.

SYSTEM INFO:

- Display and scale versions
- position and reading of sensor

CALIBRATION PROCEDURE

Note 1: Refuel before calibrating.

Note 2: For best results, calibrate on a flat surface.

Note 3: Make sure during the “empty and full” calibration that your lift axle is in the same position. (e.g. Empty axle lowered - Full axle lowered).

EMPTY CALIBRATION

Step 1: As indicated on the screen, only move the truck forward on the scale and press , enter your weight using the arrows and the button  to change decimal places. When the correct weight is entered, press , select the arrow  and then press  to go to the next step or the arrow  to go back.



CERTIFIED SCALE

Step 2: Move the truck and the trailer forward on the scale, press , enter your weight using the arrows and the button  to change decimal places. When the correct weight is entered press , select the disquette  and press  to save.



CERTIFIED SCALE

For truck with double axle

Do steps 1 and 2 with the 2nd trailer attached to the first.

Step 3: Load only the 2nd trailer on the scale, press , enter your weight, select disquette  and press  to save.



CERTIFIED SCALE

Note: The scale will not display a weight until both calibration cycles (empty and full) are completed.

FULL CALIBRATION

Once your loading is done, repeat the 3 previous steps for the full calibration.