

1) CONNECTING A SEMI-TRAILER TO THE MAIN UNIT

This option allows you to connect up to 30 different trailers to a single VISION15 load indicator.

- VISION15 is already preselected for trailer no 1. Only use this function for trailer no 2.
- It is important to calibrate mempty" and mfull" the first time you use a new trailer. See the calibration procedure on pages 2 and 3 of this booklet.
- Before calibrating, you must choose the desired unit number. See the selection procedure;
- Press **U** to verify the trailer selected.


Selection procedure for trailers 2 to 30

- Press the button **U** for three seconds;
- Select the desired unit (2 to 30) by pressing the **U** **A** buttons;
- Once selected, press the **M** button to confirm.

2) DESCRIPTION OF THE RESET OPTION

- This function allows you to submit a load with the net weight (payload) only. By activating this function, the balance displays zero kg or zero lbs.
- Enter the weights of the truck and semi-trailer loads separately.
- It is possible to install lights on the truck and semi-trailer to monitor the load from outside of the truck (extra system option available).

Programming procedure for exterior lights

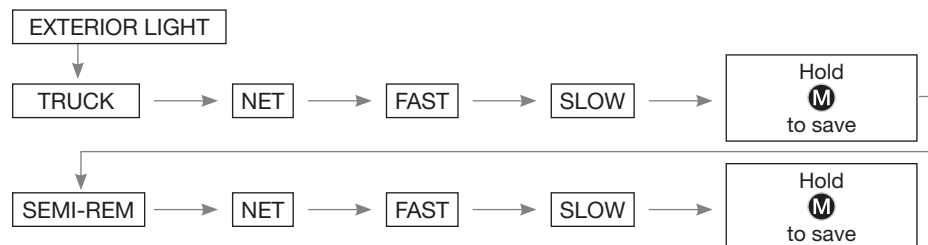

Note - Net: maximum load weight (light will stay on).
Fast: weight at which the light will flash rapidly.
Slow: weight at which the light will flash slowly.

OTHER OPTIONS AVAILABLE ON THE VISION15 SYSTEM

Press the **M** button for 3 seconds, select the **A** **U** buttons, follow the instructions on the monitor or confirm with the **M** button.


- 1) Empty programming: See pages 2 and 3 of this booklet; C
- 2) Full programming: See pages 2 and 3 of this booklet;
- 3) Lbs or Kilo;
- 4) Trailer Unit No: Trailer identifications
- 5) Exterior light option: Description of the reset option
- 6) Vision15 light: light for direct charging on the display (total charge);
- 7) Truck Unit No: to identify the truck number and the LiberT wireless number (optional);
- 8) Manual calibration;
- 9) Contrast;
- 10) Auto On-Off;
- 11) PSI display;
- 12) Display 10-100 kg;
- 13) Language;
- 14) Password: allows you to block access to the system calibration.

INSTRUCTION BOOKLET

for programming calibration of the

VISION15 INTEGRATED SCALE

for **TRACTOR TRUCKS** and **SEMI-TRAILERS**

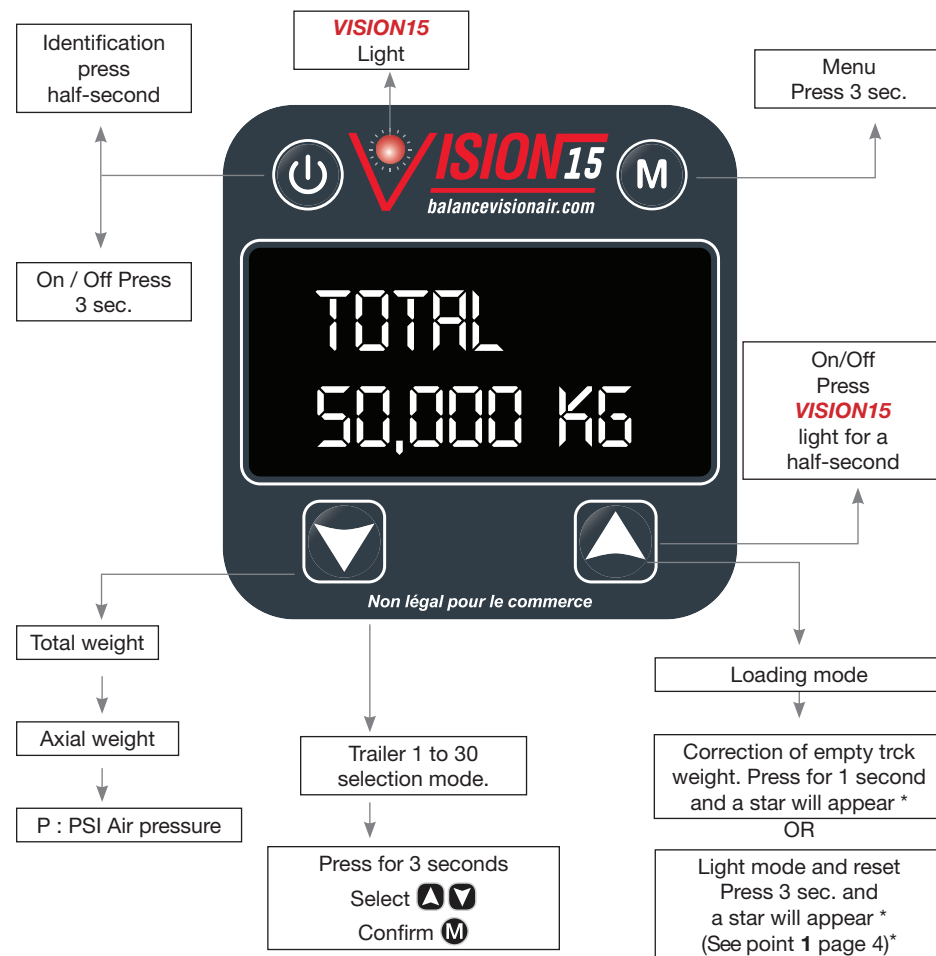

Note : Only use these function when loading. For removal, press one or three seconds depending on the option selected and the star * will disappear.



Distributions NJCO inc.
1036 B, Route de Fossambault St-Augustin-de-Desmaures
QC G3A 1W8 418 624-0884
www.balancevisionair.com | info@balancevisionair.com

EMPTY CALIBRATION PROCEDURE

STEP 1

See note 1 and note 2 on page 3.

Move the tractor truck forward onto the certified scale and enter the weight.

Ex.: 15,000 kg



CERTIFIED BALANCE

STEP 2

Move the empty tractor truck and semi-trailer forward onto the certified scale and enter the weight.


Ex.: 20,000 kg



CERTIFIED BALANCE

STEP 3

Empty calibration programming mode.

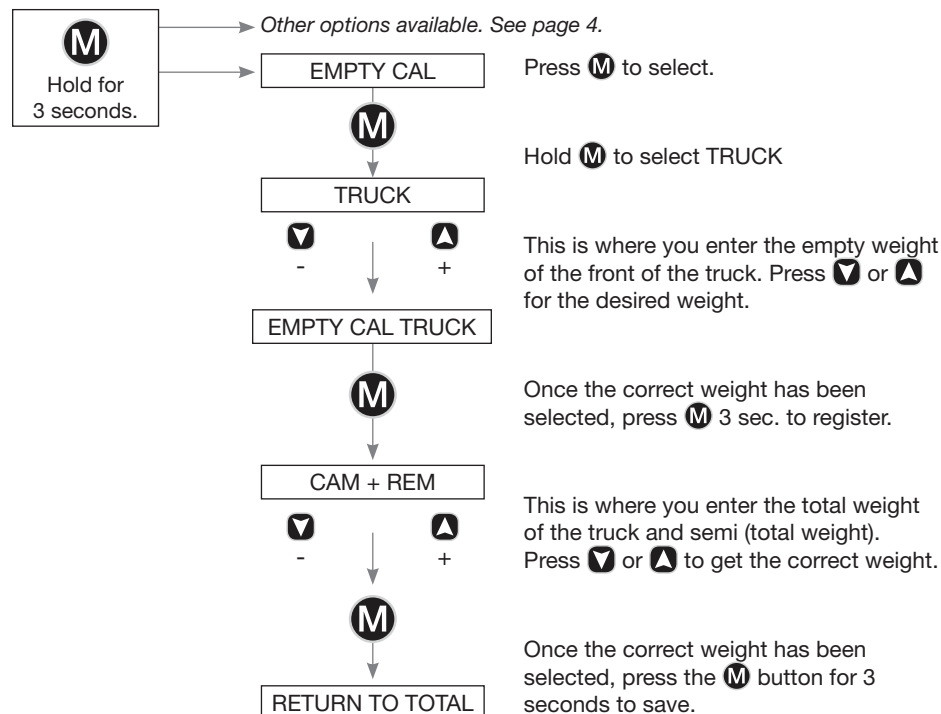

FULL CALIBRATION PROCEDURE

STEP 4

Move the tractor truck forward onto the certified scale and enter the weight.

Ex.: 30,000 kg



CERTIFIED BALANCE

STEP 5

Move the full tractor truck and semi-trailer forward onto the certified scale and enter the weight.


Ex.: 50,000 kg



CERTIFIED BALANCE

STEP 6

Full calibration programming mode

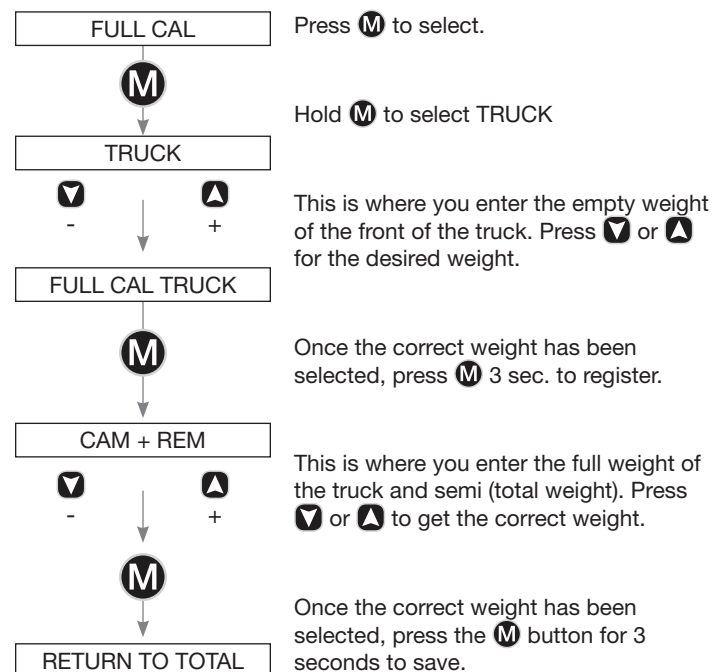

NOTE 1:
IMPORTANT
Always fill
up before
beginning
calibration.

NOTE 2:
For good
results,
ensure that all
operations are
completed on
a horizontal
surface.